Cosmostreamer Box GD1 (DJI drones & DJI goggles) Quick Start Guide



What's in your kit	2
Choose the device to connect to	3
Connecting DJI Goggles	4
1. Connect the goggles:	4
Latest DJI Goggles models (Goggles2, Goggles3, Integra, Goggles N3)	4
Older DJI Goggles models (Goggles V1, Goggles V2)	4
Connecting DJI drone's controller	6
Accessing the control panel	8
Accessing over Wi-Fi	8
Accessing over Ethernet	8
Switching the device type	9
FAQ	10

What's in your kit



A. Cosmostreamer device



B. Special "no-power" cable USB-C to USB-C



C. Power cable USB-C to USB-A



D. Micro HDMI to HDMI adapter

Cosmostreamer Box GD1 comes with three pre-activated licenses:

- DJI FPV Goggles V1/V2 (type 17)
- DJI RC-N1, RC-N2, RC-N3 (type 22)
- DJI Goggles2/3/Integra/N3 (type 23)

Choose the device to connect to



To connect DJI Goggles, follow the instructions <u>on page 4</u>

Compatible items:

The latest goggles:

- DJI Goggles3
- DJI Goggles2
- DJI Integra
- DJI N3

Previous models of goggles:

- Goggles V2
- Goggles V1



To connect the DJI drone controller, follow the instructions <u>on page 6</u>

Compatible controllers:

- DJI RC-N1
- DJI RC-N2
- DJI RC-N3

Incompatible controllers:

- DJI RC
- DJI RC2

Connecting DJI Goggles

By default, the Cosmostreamer box is configured to work with DJI Goggles. After powering up, you can use the box right away!

1. Connect the goggles:

Latest DJI Goggles models (Goggles2, Goggles3, Integra, Goggles N3)

Connect the included special 'no-power' USB Type-C to Type-C cable: one end to the USB-C port on the Cosmostreamer box and the other end to the USB-C port on the Goggles2/Integra.



Older DJI Goggles models (Goggles V1, Goggles V2)

Connect any standard USB-C to USB-A cable (not included): one end to the USB-C port on the goggles and the other end to one of the four USB-A ports on the box.



2. Connect an HDMI display:

Use the primary HDMI port on the Cosmostreamer box (the one closest to the USB-C port). The second HDMI output acts as another video output if any display is connected to it before the Cosmostreamer box powers up.



3. Connect the power:

Use the included power USB cable: one end to the "Power" USB port on the Cosmostreamer box and the other end to any standard USB power supply or power bank.



4. Power on the Goggles.

Cosmostreamer will show the goggles' video output on its HDMI output.

Connecting DJI drone's controller

By default, the Cosmostreamer Box is configured to work with DJI Goggles. With DJI drones controller, please follow the steps for <u>switching the license type</u>.

 Connect the included special 'no-power' USB Type-C to Type-C cable: one end to the USB-C port on the Cosmostreamer box and the other end to the USB-C port on the supported DJI drone controller (RC-N1, RC-N2, RC-N3). Use the USB-C port that is typically used for smartphone connections.



2. Connect an HDMI display to the primary HDMI port on the Cosmostreamer box (the one closest to the USB-C port). The second HDMI output acts as another video output if any display is connected to it before the Cosmostreamer box powers up.



MicroHDMI to HDMI adapter (included)

3. Connect the included power USB cable: one end to the "Power" USB port on the Cosmostreamer box and the other end to any standard USB power supply or power bank.



- 4. Power on the DJI drone controller.
- 5. Power on the drone. Check the controller is paired with the drone.
- 6. Optionally, connect any Android smartphone or tablet to one of the USB-A ports on the Cosmostreamer box to use the DJI Fly app with the Cosmostreamer. iOS devices are not supported.

Accessing the control panel

Accessing over Wi-Fi

- 1. Connect your PC/Mac or smartphone to Wi-Fi network "cosmostreamer". The default password is "1234512345"
- 2. Open web interface in browser <u>http://192.168.50.1</u> or <u>http://my.cosmostreamer.com</u> or just run CosmoViewerNG application <u>https://cosmostreamer.com/apps/</u>

CosmoViewerNG for Windows with Cosmostreamer device detected in the network



Web interface (goggles are disconnected)



Accessing over Ethernet

- 1. Connect your Cosmostreamer box to your router or network switch
- 2. Open web interface <u>http://cosmostreamer.local</u>
- 3. Or just run CosmoViewerNG application <u>https://cosmostreamer.com/apps/</u>

Switching the device type

Cosmostreamer DG1 is equipped with **autodetection of the connected device type**. But if you'd like to change the connected device type manually, you can follow these steps:

- 1. In the admin panel, click the main menu button (bottom right part of the screen)
- 2. Click on the "Device settings" menu



3. Choose the device type you'd like to work with

$\leftarrow \rightarrow c$	S 192.168.50.1	· 한 😋 🗄
Info	Peard medal: Pearkary Di 4 Medal P Day 4 5	
License		
Secondary camera	Pirmware version: 0,21.1 Device name	
Splash/Intro	Cosmostreamer	
Ethernet		
Wi-Fi	Camera type	
Display	DJI Goggles2/3/Integra/N3 (type 23)	~
Video/Audio	✓ Allow auto detection	
Streaming	Save settings	
Recording		
Overlay camera		
RC		
Servo control		×

- 4. Click "save"
- 5. Exit the menu (click the cross icon in the bottom-right corner).

How can I get a "clear" HDMI video without OSD from DJI Goggles2/3/Integra/N3?

Go to the Goggles menu, Settings -> Camera -> Advanced Camera Settings -> Camera View Recording -> OFF

How can I get OSD from Goggles V1/V2?

This option is not available for Googles V1/V2

I don't have a video from DJI Goggles V2 with Caddx Vista

Go to the Goggles menu and set the parameter "AUTO TEMP = OFF"